


Beat  
Command  
List

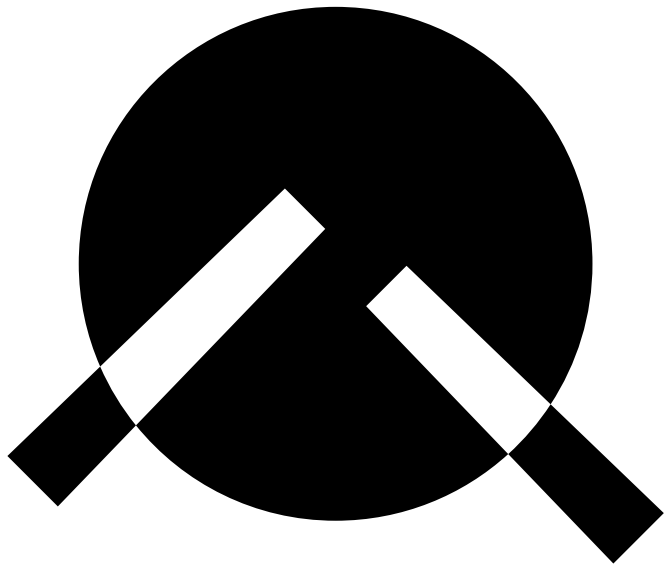

//// dedalo

# Playback Performance Mode

# 1

## Start Here

Use DC 9V 100mA center negative adapter  
MIDI (Type A) & SYNC TRS 3.5 mm


## Knob Navigation




## Play / Stop



## Tap Tempo

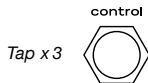


## Count-In

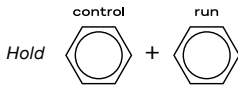


## Switch Navigation

### Next Beat

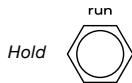


## Switch Navigation

### Previous Beat

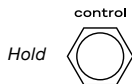


## Switch Navigation

### Skip One Beat

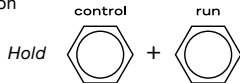

## Copy / Paste

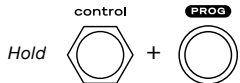

## Abort Copy



# Programming Mode




Enter / Exit  
(Select a beat to edit)




Metronome On / Off



Insert Hits / Note Repeat

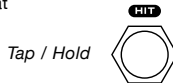


Pitch Down

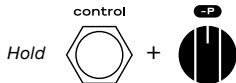


Insert / Delete Accents




Undo Last Action

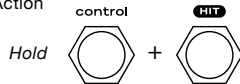

Clear Instrument

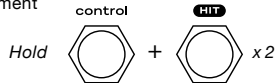

Clear Beat

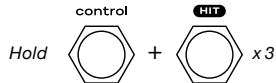


Time Division


A = 5/4

B = 3/4

C = 7/8

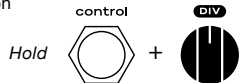


Save & Exit

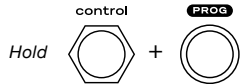

# Mash-Up Performance Mode

# 3


Enter

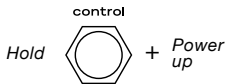


Play / Stop




Tap Tempo

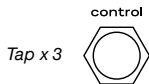


Mash-Up Navigation

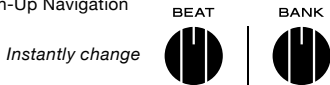


Restart Beat

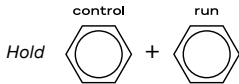

Select Beat & Restart

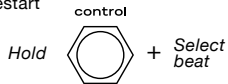

Copy / Paste

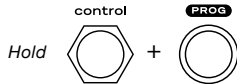

Abort Copy



From this mode you can also access the programming mode.

(Page 2)


# Joystick Performance Mode

# 4

Enter




Hit Left / Right

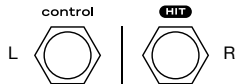

Assign Sounds



Pitch Down

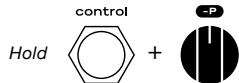

Exit To Playback Mode




# 5

# Sync Options

Enter



Option Status

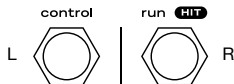

Page Navigation



Page Change



Save & Exit



**Page 1** (*Beat knob*)

1. Tempo Source  
L = Internal / R = MIDI
2. Sync Out  
L = MIDI / R = Pulse Clock
3. Sync Pulse Type  
L = 1 pps / R = 24 ppqn
4. Sync To External Pulse  
L = Off / R = On (Overrides All Settings)

**Page 2** (*Bank knob*)

- A. Transport Sync & Clocks  
L = Always Send / R = Just Stop Clock
- B. MIDI Notes & Sync Transport Type  
L = Disable MIDI Notes & Use Sync Signal  
R = Enable MIDI Notes & Use Sync Pulse
- C. Program Change  
L = Enable / R = Disable
- D. MIDI Transport  
L = Enable / R = Disable


*The device is fixed to MIDI channel 10.*

# 6


# Reset Mode

---


Enter

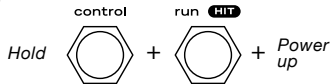

Factory Reset

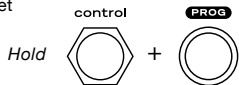

Clear All

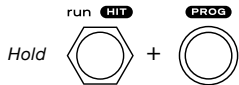



[dedalofx.com.ar](http://dedalofx.com.ar)